



**NOTES**

1. Spacing between heads varies. Ideal spacing 5m or greater.
  2. Alternate location of "TRANSIT SIGNAL" sign is above heads on pole only in absence of space.
- All dimensions are in millimetres unless otherwise shown.