
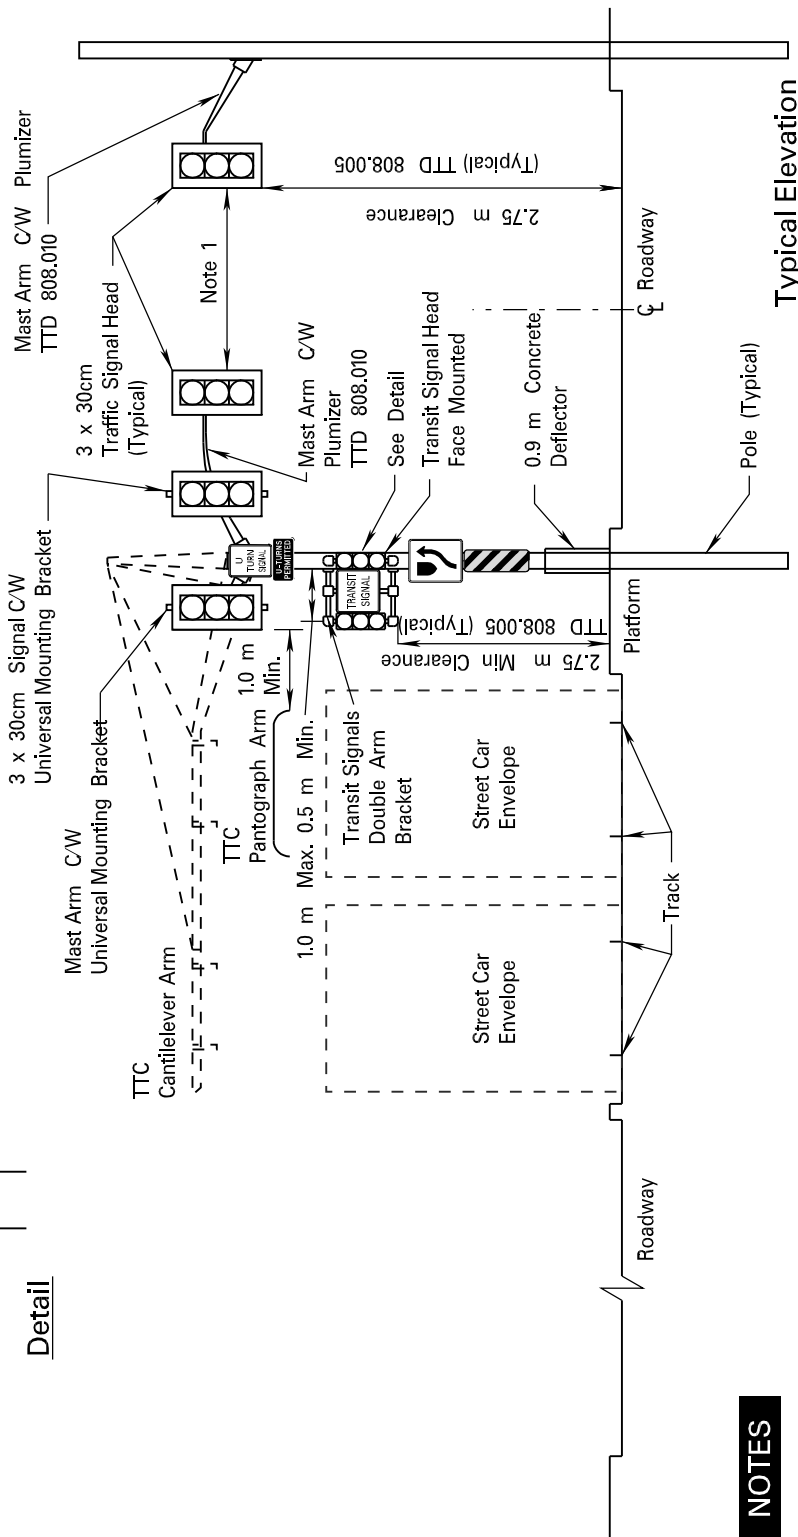
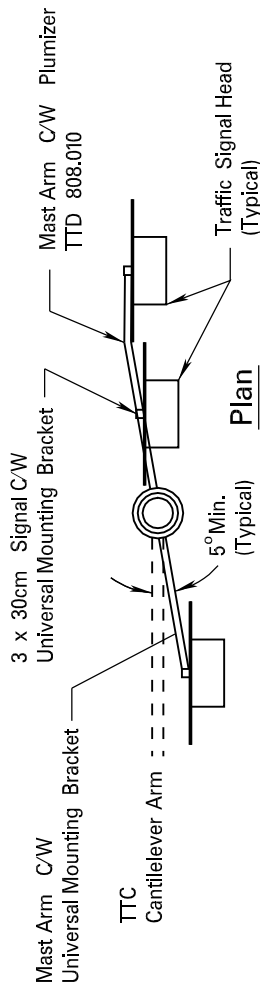


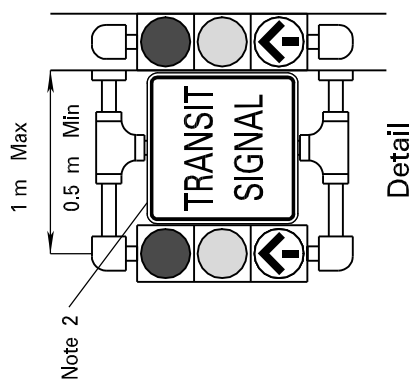

# NOTES

1. Spacing between heads varies. Ideal spacing 5m or greater.
  2. Alternate location of "TRANSIT SIGNAL" sign is above heads on pole.
- All dimensions are in millimetres unless otherwise shown.