


## **PLAN**

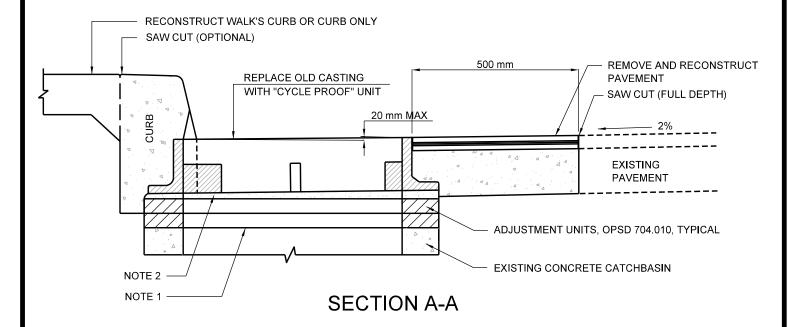

## NOTES

- 1. FIRST ADJUSTMENT UNIT TO BE SET IN FULL MORTAR BED.
- 2. FRAME TO BE SET IN FULL MORTAR BED.

All dimensions are in millimetres unless otherwise shown.

<b>Toronto</b>	INSTALLATION OF NEW CATCH BASIN CASTING	REV 1	NOV 2014
		T-610.020-1	
		NTS	SHEET 1